



[www.swan-brand.co.uk](http://www.swan-brand.co.uk)



Scan this QR code  
to hear about  
our story



We love  
what we do



we're proud  
of our quality



Find us on Facebook

Copyright © 2012  
Swan Products Ltd. PO Box 3117, Stoke-on-Trent ST4 9GD

**Swan**  
designed for life



## Food Processor

For model: SP20100N

v2.0



## Important Safeguards

**When using any electrical appliance, basic safety precautions should always be followed including the following:**

1. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
2. Incorrect operation and improper use can damage the appliance and cause injury to the user.
3. **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.**
4. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
5. Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
6. Never immerse the unit in water or any other liquid for cleaning purposes.
7. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Unplug the unit when not in use or before cleaning
8. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
9. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
10. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
11. Do not use the appliance on a gas or electric cooking top or over or

**Swan**  
designed for life

Helpline Number: 01733 404703  
WWW.SWAN-BRAND.CO.UK

## Important Safeguards


- near an open flame.
12. Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
  13. This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
  14. Do not carry the appliance by the power cord.
  15. Do not leave the appliance unattended during use.
  16. Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
  17. The manufacture does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
  18. In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
  19. Your appliance must never be switched on through an external timer or any kind of separate remote control system
  20. **Do not touch the moving parts and do not insert any kind of object(knives, forks, spoons etc.) while the product is operating. A spatula may be used only when the product is not in operation, avoiding the risk of serious injury.**

**Specification**  
Model No. SP20100N  
230V~50Hz  
250W

**Swan**  
designed for life

Helpline Number: 01733 404703  
WWW.SWAN-BRAND.CO.UK

## How to Use

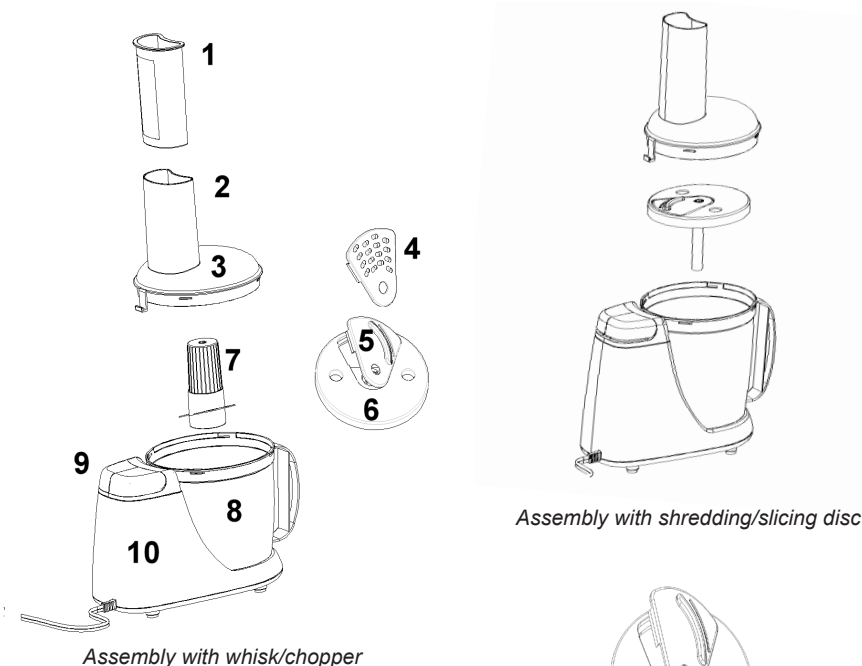

**1. Pusher:** Use it to gently push the vegetables or meat down so as to facilitate the processing of food. Never use fingers to press the food.

**2. Feeder:** Cut the food into small pieces and insert it through the feeder

**3. Cover:** The cover must be properly locked with Base before operating. Otherwise the appliance can not be started. Never remove cover before the blade or disc has completely stopped

**4. Shredding blade:** used for shredding of vegetables or grating of hard cheese.

**5. Slicing blade:** use for slicing potatoes, carrots and other vegetables

**6. Disc holder**  
**7. Chopping blade**

**8. Bowl:** The bowl must be properly engaged with the base and cover or the unit will not operate

**9. on/off pulse switches**  
**10. motor base**

### Before first use


Carefully unpack the food processor and remove any package material or label or stickers. Cleaning all the parts except Base following the instructions in Cleaning and Maintenance. Handle the blades or disc with extreme care as they are sharp.

### Using the food processor

The food processor can be used for mincing meat, chopping nuts, shredding or slicing vegetables etc. using the different attachments to perform the various tasks.

Helpline Number: 01733 404703  
WWW.SWAN-BRAND.CO.UK

## How to Use

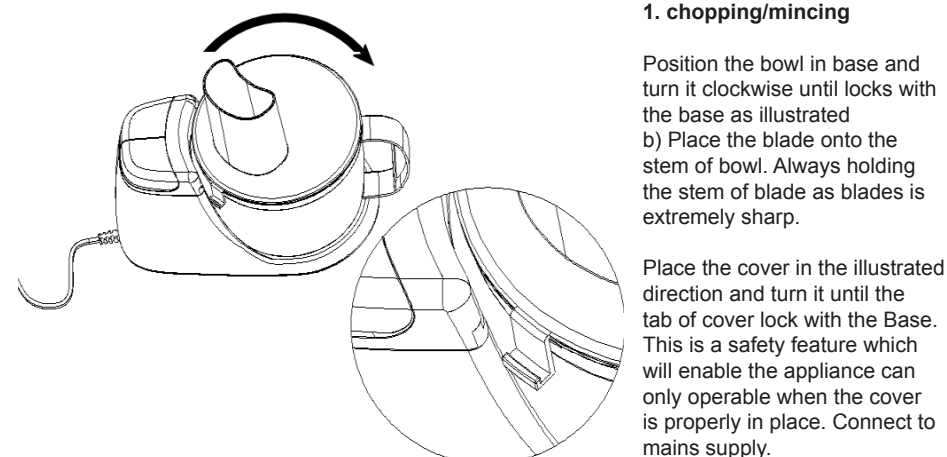

### 1. chopping/mincing

Position the bowl in base and turn it clockwise until locks with the base as illustrated  
b) Place the blade onto the stem of bowl. Always holding the stem of blade as blades is extremely sharp.

Place the cover in the illustrated direction and turn it until the tab of cover lock with the Base. This is a safety feature which will enable the appliance can only operable when the cover is properly in place. Connect to mains supply.

Cut the boneless meat or vegetables into small pieces and insert through the Feeder, use the Food pusher to press it if necessary. When the On button is depressed the food will be minced/chopped within seconds. Never overfill the bowl, particularly for beef, the max weight per time can be processed should not exceed 300g and the max running time cannot exceed 1 minute, with a minimum 2 minutes rest time must be maintained between two consecutive cycles.

### 2. slicing

Correctly position the bowl as illustrated above.

Assemble the Slicing disc on the Disc holder. Always align the right side with the Disc holder first and then press down the left side of Slicing disc with a little force. When removing the disc, reverse the Disc holder and press the right side of Slicing disc with force to release one side first.

Place the Disc holder into the center of bowl as illustrated and then close the cover. Make sure the cover is locked with the Base before operating. Cut the vegetables like potato, carrots, into pieces that can fit into the feed tube. If the food is too large to fit into the feed tube never press it with force.

Press the On button to begin operation.

### 3. Shredding

Operation is similar to that of slicing but using the shredding/grating disc instead.

### 4. Cleaning and Maintenance

Switch off the appliance and disconnect the power supply before cleaning. Empty the bowl and remove all attachments and immerse them in water for easier cleaning. The shredding and slicing disc are OK to wash in the dishwasher. Extreme caution must be taken when handling blade or disc as they are very sharp. Wipe the outside of base with cloth and Never immerse it into water as electric shock is possible. Then dry thoroughly. Ensure the interlock area is free of food particles. Some food may discolor the plastic of the bowl. This is normal and will not harm the appliance or effect the flavor of food. Rub with cloth dipped with vegetable oil to remove discoloration.

Helpline Number: 01733 404703  
WWW.SWAN-BRAND.CO.UK

**Swan**  
designed for life

### Spares references:

When ordering spares quote SP20100N followed by part number on diagram.  
Eg. Pusher would be: SP20100N-1

## BS Plug Wiring

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

**WARNING: THIS APPLIANCE IS DOUBLE INSULATED. DO NOT CONNECT ANY WIRE TO THE EARTH TERMINAL**

## WEEE Directive

### Disposal of Unit



Disposal instructions for Swan items in accordance with the WEEE directive. Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit [www.recyclemore.co.uk](http://www.recyclemore.co.uk), or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

## Declaration of EC Conformity

We Swan Products Ltd Declare that this product conforms to all the following product legislation. In accordance with the following directive(s):

2004/108/EEC. The Electromagnetic Compatibility Directive  
2006/95EC. The LVD directive (Low Voltage Directive)  
2011-65-EU. The RoHS. Directive. (Restriction of Hazardous substances Directive)  
80/590/EEC and 89/109/EEC Food Contact

Kev Stewart  
Product Manager



**Swan**  
designed for life

Helpline Number: 01733 404703  
[WWW.SWAN-BRAND.CO.UK](http://WWW.SWAN-BRAND.CO.UK)

## Two Year Warranty

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

### The following conditions apply:

The product must be returned to the retailer with proof of purchase.  
The product must be installed and used in accordance with the instructions contained in this instruction guide. It must be used only for domestic purposes. It does not cover wear and tear, damage, misuse or consumable parts. Swan Products Ltd has limited liability for incidental or consequential loss or damage. This guarantee is valid in the UK and Eire Only.

## Swan Brand Heritage



Camden St, Birmingham c1933

## Did you know...

Components for the Swan Teasmade were still being made at the original Bullpitt & Sons factory on Camden St, Birmingham as recently as 2006.